

INTRUDER ALARM SYSTEM

IMPORTANT OPERATING STEPS

Internal setting

The intruder alarm system is internally set on the keypad if there are persons in the property (protection of persons present).

On the keypad

- 1 Press the internal-setting button.
- 2 If several partitions are available, select all, one or several partitions.
- 3 Confirm the function with the “Enter” button.

External setting

The intruder alarm system is externally set at a reader (outside the partition) if there are no persons in the property (protection of the building). In special cases, the intruder alarm system can also be externally set on the keypad. Special programming is necessary for this.

On the reader

- 1 Hold the transponder in front of the reader until the double signal tone of the buzzer sounds.
Reaction: Initially, a single signal tone of the buzzer and brief illumination of the yellow LED.
This is followed by a double signal tone of the buzzer and double illumination of the yellow LED.
- 2 Remove the transponder from the reader.
Reaction: A long signal tone of the buzzer and long illumination of the yellow LED.
The intruder alarm system is externally set.

or

Reaction: Several short signal tones of the buzzer and a blinking yellow LED.

The intruder alarm control panel was not externally set (e.g. window or door opened, see “View message memory”).

On the keypad (special case)

- 1 Press the external-setting button.
- 2 If several partitions are available, select all, one or several partitions.
- 3 Confirm the function with the “Enter” button.

Unsetting

The intruder alarm system is unset on the keypad (if internally set) or on the reader (if externally set).


On the reader

- 1 Hold the transponder in front of the reader until the signal tone of the buzzer sounds.
Reaction: A brief signal tone of the buzzer and brief illumination of the yellow LED.
- 2 Remove the transponder from the reader.
Reaction: Long illumination of the green LED.
The intruder alarm system is unset.

or

Reaction: Alternate indication by the buzzer / the yellow LED and the red LED.
The intruder alarm system is unset, and an alarm is pending.

On the keypad

- 1 Press the “Unset” button.
- 2 If several partitions are available, select all, one or several partitions.
- 3 Confirm the function with the “Enter” button. 

View message memory


All current messages (e.g. open windows and doors), pending alarms and faults are displayed in the message memory.

On the keypad

- 1 Scroll with the “arrow” buttons through the message memory.

Reset alarm

On the keypad

- 1 Unset the intruder alarm system (see “Unset”).
- 2 Scroll through the message memory using the “arrow” buttons until you have read all messages.
- 3 Press the “Reset” button. 
Reaction: The intruder alarm system performs a reset, and the “Alarm” LED goes out.